

#### SKU: TL-S-XX-ASMO



# **Fitting Instructions**

## **Toyota Land Cruiser 76,78,79 Series**

Rock Sliders. Single, extra and dual cab models. Wagon and Troop Carrier. 2007 on

Australias Best Off Road Products Created... Not Cloned

## **Contents**

WHY UNEEK	3
IMPORTANT INFORMATION	4
COMPONENTS AND PARTS	5
STEP 1	6
STEP 2	6
STEP 3	6
STEP 4	6
STEP 5	7
STEP 6	7
FINISHED PRODUCT	8

## Why Uneek

### **Australian Designed and Built**

All our products are designed and manufactured right here in Australia, allowing us to have better lead times and better quality control than companies manufacturing overseas. By supporting us you're supporting to grow the Australian economy and our brand.

## **Uneek Styling**

We do not design our bars to look the same across the vehicle range. We fully develop our own product to individually suit each vehicle. We take time in designing from scratch and then test all our bars to comply with all relevant ADRs and Australian Standards.

## Lightweight Through Smart Engineering

Having a steel bar doesn't mean you have to add more weight than is required to the front of your vehicle. Our engineering practises ensure we have the right protection, designed the right way to ensure protection is at its maximum and weights at its minimum.

## **Proven Off Road**

We take our products out and test them right here in the heart of our country in our Australian conditions so we know our products can withstand anything you throw at them.

## **Increased Approach Angles**

Our bars are designed to give you the best advantage while off road, with increased approach angles means you can tackle those tough and steep angles better than you could with the original setup or other alternatives.

## Warranty

Uneek 4x4 back itself as Australias leading steel bull bar manufacturer. This is why we provide you with the best steel bar warranty in Australia - 5 years.

## Important Information

## PLEASE READ BEFORE INSTALLATION.

- When installed in accordance with these instructions rock sliders do not affect the operation of the vehicles SRS airbags.
- This product must be installed exactly as per these instructions using only hardware supplied.
- Take a few moments to read instructions thoroughly before beginning work.
- In the event of damage to any component please contact Uneek 4x4 in regards to repair/replacement of components.
- Do not use this product for any vehicle make or model other than that specified on these instructions.
- This product and its fixings must not be modified in any way unless stated in these fitting instructions.
- The installation of this product is recommended for trained personnel.
- These instructions are correct at time of publication. Uneek 4x4 cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer.
- During installation it is the duty of the installer to check correct operation/clearances of all components.
- Installation time: 1 hour.
- Vehicle specific notes: note different sliders for different applications are covered in these instructions.

#### **EYE & EAR PROTECTION REQUIRED**

#### DRILLING REQUIRED

#### TWO PERSON LIFT REQUIRED

#### **TORQUE SETTING**

#### **CUTTING OR GRINDING REQUIRED**

FASTENER TORQUE SETTINGS: M6 – 9Nm (4lb ft) M8 – 22Nm (16lb ft) M10 – 44Nm (32lb ft) M12 – 77Nm (57lb ft)

TOOLS REQUIRED: Spanners, socket set, drill and 10mm drill bit.

## **Components and parts**

#### Contents for 76 Series Sliders

ITEM NO.	PART NUMBER	DESCRIPTION	QTV.	
1	TL-S-76-ASM1R		1	
2	TL-S-76-ASM1L	SLIDER ASSY WELDED 76	1	
3	03-0374	BRACKET INNER SLIDER 78	2	
4	05-0176	TUBE CRUSH 78 SLIDER	4	
5	M12X90X1.75	M12 X 90MM X 1.75 BOLT	4	
6	M12 FW	M12 FLAT WASHER	4	
7	M12 SW	M12 SPRING WASHER	4	
8	M12 X 1.75 FN	M12 FLANGE NUT	4	
9	09-0136	PANEL TREAD PLATE 76	2	
10	JK-S-10	LOGO PLATE	2	
11	M6 x 12 BHCS	M6 x 12 BHCS z/p	16	
12	M6 FN	FLANGE NUT M6	16	
13	M10X1.5N	M10 X 1.5 NUT	6	
14	M10FWX25	M10 FLAT WASHER X 25MM WIDE	12	
15	M10SW	M10 SPRING WASHER	6	
16	M10X30	M10 X 1.5 X 30MM BOLT	6	


Contents for 78 and 79 Series LC, Dual Cab and Troop Carrier

#### MAIN PARTS

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TL-S-78-ASM1R	TOYOTA 78 SLIDER WELDED ASSY	1
2	TL-S-78-ASM1L	TOYOTA 78 SLIDER WELDED ASSY	1
3	03-0786	70 SERIES STEP STRAP ASSY	2
4	09-0028	PANEL TREAD SLIDER HILUX 05	2
5	JK-S-10	LOGO PLATE	2

#### BOLT KIT

NO.	PART NUMBER	DESCRIPTION	QTY.
6	M12X90X1.75	M12 X 90MM X 1.75 BOLT	2
7	M12 FW	M12 FLAT WASHER	4
8	M6 x 12 BHCS	M6 x 12 BHCS z/p	16
9	M6 FN	FLANGE NUT M6	16
11	M12 Nyloc nut	M12 NYLOC NUT	2
12	04-0280	M14 X30X2 CAM BOLT	4
13	M14 NYLOC	NYLOC SELF LOCKING NUT, ST STL A2 ISO	4
14	M14 WASHER	M14 WASHER Z/P	4

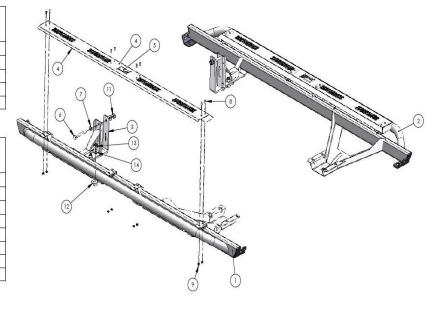

### Step 1

Remove original steps and brackets if fitted.




### Step 2

Support gearbox cross member with a jack and do one side at a time. Remove 4 bolts at edge.



### Step 3

Lift slider up to vehicle, and position front mount shown, over bolt holes just removed, and use factory bolts to hold slider in place loosely.

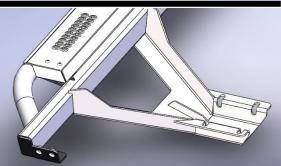

### Step 4

Lift back end of slider up on to chassis, and secure around chassis with backing plate. Fit cam bolts to the mounting system as shown. Use two cam bolts per mount and tighten the cams so that backing plate sits tightly around the chassis rail.






## Step 5

On one side you will need to maneuver the backing plate through the fuel lines, take extra care here.



### Step 6

Once the slider is in position, fit the tread plate with M6 hardware. Then repeat steps 2-5 for other side and you're done.

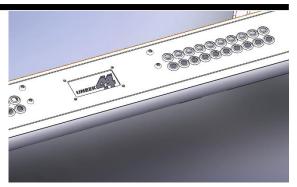

## **Finished Product**



Revised: 23/08/2019

# Australias Best Off Road Products Created... Not Cloned

20 Gateway Drive, Carrum Downs, VIC, 3201

www.uneek4x4.com.au

1800 806 952