

UNEK4
AUSTRALIA
OFF ROAD ACCESSORIES

SKU: JK-HL-A-ASM0



Fitting Instructions

Jeep JK Wrangler 2007 on A Pillar High Lift Jack Mount

***Australias Best Off Road Products
Created... Not Cloned***

Contents

<i>WHY UNEEK</i>	<i>3</i>
<i>IMPORTANT INFORMATION</i>	<i>4</i>
<i>COMPONENTS AND PARTS</i>	<i>5</i>
<i>STEP 1</i>	<i>6</i>
<i>STEP 2</i>	<i>6</i>
<i>STEP 3</i>	<i>6</i>
<i>STEP 4</i>	<i>6</i>
<i>FINISHED PRODUCT</i>	<i>7</i>

Why Uneek

Australian Designed and Built

All our products are designed and manufactured right here in Australia, allowing us to have better lead times and better quality control than companies manufacturing overseas. By supporting us you're supporting to grow the Australian economy and our brand.

Uneek Styling

We do not design our bars to look the same across the vehicle range. We fully develop our own product to individually suit each vehicle. We take time in designing from scratch and then test all our bars to comply with all relevant ADRs and Australian Standards.

Lightweight Through Smart Engineering

Having a steel bar doesn't mean you have to add more weight than is required to the front of your vehicle. Our engineering practises ensure we have the right protection, designed the right way to ensure protection is at its maximum and weights at its minimum.

Proven Off Road

We take our products out and test them right here in the heart of our country in our Australian conditions so we know our products can withstand anything you throw at them.

Increased Approach Angles

Our bars are designed to give you the best advantage while off road, with increased approach angles means you can tackle those tough and steep angles better than you could with the original setup or other alternatives.

Warranty

Uneek 4x4 back itself as Australia's leading steel bull bar manufacturer. This is why we provide you with the best steel bar warranty in Australia - 5 years.

Important Information



PLEASE READ BEFORE INSTALLATION.

- This product must be installed exactly as per these instructions using only hardware supplied.
- These instructions are correct as at the publication date. Uneek 4x4 Pty Ltd cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer.
- During installation, it is the duty of the installer to check correct operation/ clearances of all components.
- Installation time is estimated at 15 min.
- This part requires you to have a slider with a step arrangement to support the bottom of the jack. While you can just rest the jack on this step it is best to secure it to the step by drilling and tapping your step, or using a u bolt.
- Make sure you use a Hi lift jack isolator to prevent the jack from vibrating.
- It is recommended to rest a rubber pad under the jack to reduce the chance of vibration.



EYE & EAR PROTECTION REQUIRED



DRILLING REQUIRED



TWO PERSON LIFT REQUIRED



TORQUE SETTING



CUTTING OR GRINDING REQUIRED

FASTENER TORQUE SETTINGS:

M6 – 9Nm (4lb ft)

M8 – 22Nm (16lb ft)

M10 – 44Nm (32lb ft)


M12 – 77Nm (57lb ft)

TOOLS REQUIRED:

Hand spanners and torque drivers.

Components and parts

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	JK-HL-A-1	WINDSCREEN MOUNT	1
2	JK-HL-A-ASM1	M10 NUT PLATE	1
3	M10-1.5x50	M10x50 HEX BOLT Z/P 8.8	2
4	M10FWX25	M10 FLAT WASHER X 25MM WIDE	2
5	M10 SPRING WASHER		2
6	M8 SPRING WASHER	M8 SPRING WASHER	2
7	M8 WASHER	M8 WASHER	2
8	M8 x30	M8 X 30 HEX BOLT ZINC	2
9	SL1	180 X 180 X 140 SHIPPER	1
10	JK-HL-A-FI	FITTING INSTRUCTIONS	1

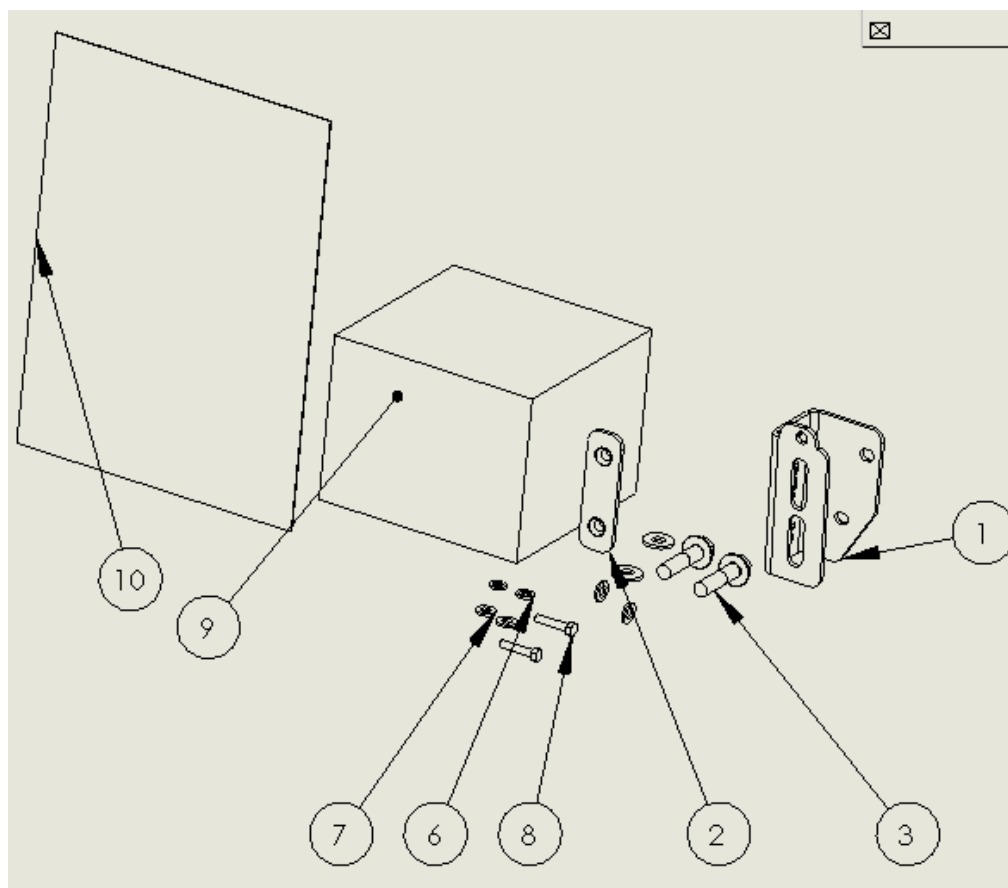

Step 1

Remove the lower 2 bolts on your A pillar with a torque driver.



Step 2

Place new bracket on A pillar and torque up 2 M8 bolts and washers.



Step 3

Place Hi Lift jack on your slider/step and feed bolts in through holes and line up with nut plate behind bracket and torque up.

Don't forget a Hi lift jack Isolator or even a cable tie to secure your handle.

Uneek 4x4 highly recommends pushing down on the lifting platform of the jack with your foot while doing up the M12 bolts. This is the best method for preventing rattles.



Step 4


Drill and tap your slider/step or use a U bolt underneath to hold the jack down.

If you skip this step your jack may get ripped off when going off-road.

We suggest using a rubber pad under the jack to prevent rattles.

Most rattles come from the jack itself, not the mounts.

Uneek 4x4 highly recommends pushing down on the lifting platform of the jack with your foot while doing up the M12 bolts. This is the best method for preventing rattles.

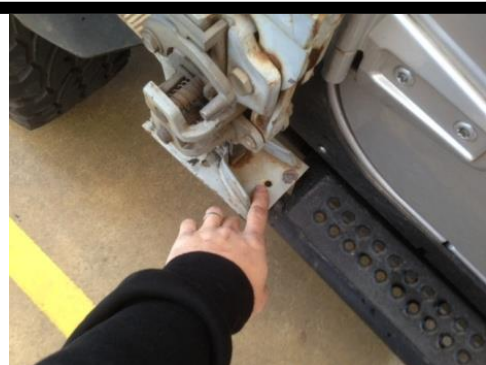

Finished Product



Revised: 27/08/2019

***Australia's Best
Off Road Products
Created... Not Cloned***

20 Gateway Drive, Carrum Downs, VIC, 3201

1800 806 952

www.uneek4x4.com.au

