

SKU: JK-SA-US-ASMO



Fitting Instructions

Jeep JK Wrangler 2007 - 2015 Sill Armour 4 Door

Australias Best Off Road Products Created... Not Cloned

<u>Contents</u>

WHY UNEEK	3
IMPORTANT INFORMATION	4
COMPONENTS AND PARTS	5
STEP 1	6
STEP 2	6
STEP 3	6
STEP 4	6
FINISHED PRODUCT	7

Why Uneek

Australian Designed and Built

All our products are designed and manufactured right here in Australia, allowing us to have better lead times and better quality control than companies manufacturing overseas. By supporting us you're supporting to grow the Australian economy and our brand.

Uneek Styling

We do not design our bars to look the same across the vehicle range. We fully develop our own product to individually suit each vehicle. We take time in designing from scratch and then test all our bars to comply with all relevant ADRs and Australian Standards.

Lightweight Through Smart Engineering

Having a steel bar doesn't mean you have to add more weight than is required to the front of your vehicle. Our engineering practises ensure we have the right protection, designed the right way to ensure protection is at its maximum and weights at its minimum.

Proven Off Road

We take our products out and test them right here in the heart of our country in our Australian conditions so we know our products can withstand anything you throw at them.

Increased Approach Angles

Our bars are designed to give you the best advantage while off road, with increased approach angles means you can tackle those tough and steep angles better than you could with the original setup or other alternatives.

Warranty

Uneek 4x4 back itself as Australias leading steel bull bar manufacturer. This is why we provide you with the best steel bar warranty in Australia - 5 years.

Important Information



PLEASE READ BEFORE INSTALLATION.

- This product must be installed exactly as per these instructions using only hardware supplied.
- Take a few moments to read instructions thoroughly before beginning work.
- In the event of damage to any component please contact Uneek 4x4 in regards to repair/replacement of components.
- These instructions are correct at time of publication. Uneek 4x4 cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer.
- A nutsert gun will be required.
- During installation it is the duty of the installer to check correct operation/clearances of all components.
- Installation time: 2 hours.

	EYE & EAR PROTECTION REQUIRED
	DRILLING REQUIRED
	TWO PERSON LIFT REQUIRED
(£°)	TORQUE SETTING
	CUTTING OR GRINDING REQUIRED

FASTENER TORQUE SETTINGS:

M6 – 9Nm (4lb ft)

M8 - 22Nm (16lb ft)

M10 - 44Nm (32lb ft)


M12 - 77Nm (57lb ft)

TOOLS REQUIRED:

G Clamps or similar, hex keys, power drill, 9mm drill bit, centre punch and paint pen.

Components and parts

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	JK-SA-US-1	LH SILL ARMOUR UNLIMITED	1
2	M6 X 25 CSK	M6 x 25 csk machine screw	34
3	M6 NUTSERT	M6 NUTSERT	34
4	JK-SA-US-1R	RH SILL ARMOUR UNLIMITED	1

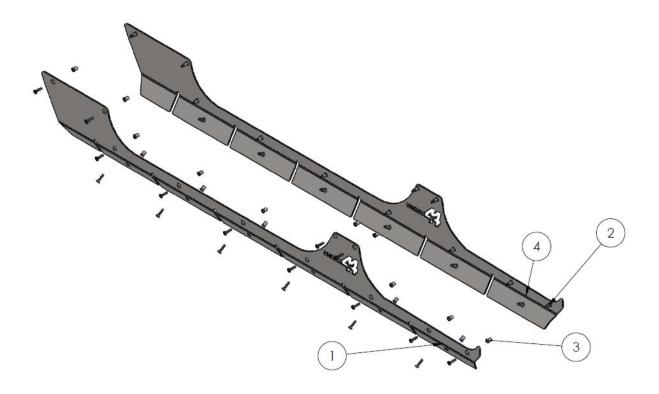

Step 1

Open the doors and clamp the armour panel to the body of the car. Take care lining it all up.



Step 2

Using a centre punch mark each hole through the armour panel for drilling. Be very careful here to mark right in the centre of each hole.



Step 3

Drill out each hole to 9mm and fit nutserts to each hole. Ensure you paint the edges of each hole to prevent rusting before you insert the nutsert.







Step 4

Fit armour panel to car and torque up each screw. Now repeat for the other side.





Finished Product



Revised: 27/08/2019

Australias Best Off Road Products Created... Not Cloned

20 Gateway Drive, Carrum Downs, VIC, 3201

1800 806 952 www.uneek4x4.com.au